

Rear Mounted Folding Van Ramp



Rear Mounted Folding Van Ramp is designed to make unloading / loading of vehicles safer and quicker for drivers. This ramp is ideal loading of wheel devices such as mobility scooters, motorbikes, cleaning equipment & garden maintenance equipment etc. The ramp can be fitted either on the rear of the van (with appropriate accessory) or within the van.

Model Number	Dimensions	Maximum Mounting Height	Maximum Weight Capacity
RAM300	2000mm x 870mm	660mm (150mm from the leading edge)	400kg

Phone: 08 9248 4180
Fax: 08 9248 9452
E-mail:

Installation Guidelines

- It is suggested that an approved motor vehicle accessory fitter installs the REDGUM Brand rear mounted folding van ramp.
- Please ensure that you comply with all appropriate state traffic laws when installing the REDGUM Brand rear mounted folding van ramp.
- The ramp is supplied without any fixings as each vehicle positioning locations will greatly vary the fixings required.
- All fixing used must be high tensile graded bolts and lock nuts.
- Do not exceed the maximum fit height of the ramp. 660mm-150mm from Leading Edge
- The platform must be fitted on a flat level surface.

Operation Instructions

Lowering the Ramp

- In the upright position release the rubber tag and remove the captive safety chain (figure 1)
- Using the handle fitted on the unit, pull the ramp away from the vehicle, the hydraulic lifters rams will assist with making this a smooth and easy operation (figure 2) Ensure the ramp is lowered carefully. **Warning - Only Lower The Ramp On Flat Level Surface!**

- It is now ready to be used

To return the ramp to the upright position

- Ensure all items are off the ramp.
- Using the handles from figure 2 lift the second section up and toward the van, the hydraulic lifter rams will assist with a smooth and effortless operation to close the ramp.
- Re secure the rubber tab & captive safety chain as per figure 1



FIGURE 1



FIGURE 2

Safety Warnings

- Do not exceed the 400kg maximum weight.
- Always secure the ramp closed with the rubber closer and captive safety chain .
- Keep body parts away from any possible pinch points.
- Always unload / load on a flat level surface.
- Check the ramp fittings to ensure they are tight and secure every day before use.

Maintenance

The main structure of the ramp is all aluminum and requires no painting or covering to maintain the finish. Light lubrication of the hinges & pivot points is required periodically.